

ARIO Utility User's Manual

RS-485 Remote I/O Configuration Utility

Copyright

The description, exemplary and software applied to Wolf Series Module are the copyright of Advanio Co., Ltd. Any modification, reproduction, duplication, translation, publicly distribution, transmitting and publishing in whole or in part without the prior consent of Advanio Co., Ltd. may infringe the application laws and regulations.

The information provided in the manual is limited, Advanio Co., Ltd. assume no liability for damage or loss resulting from use of this product.

Warranty


The warranty is a period of 2 years from the date of original purchase. No maintenance and repair fee would be charged for product failure or damage, but not applicable to the repaired or modified product.

Within the duration of the warranty, any damage caused by any improper installation/operation by any individual other than Advanio certified service technician, Advanio reserve the right to determine the warranty liabilities. Any kind of damage caused by human factors, improper installation and misuse, Advanio shall in no event be liable for any consequential and accidental damages whether by negligence specified above or otherwise.

Table of Contents

Chapter 1. Introduction	1
1.1 Utility Overview	2
1.2 Power Requirement.....	2
1.3 RS-485 Network Connections	3
1.4 Setup and Use	3
1.4.1 Power Supply and RS-485 Network Connections.....	3
1.4.2 Module Address Setup and Default Communication Configuration	3
1.4.3 Setup Host PC Communication Port	4
1.4.5 Guideline for Failure to Find Module.....	7
Chapter 2 Module Configuration and Test	9
2.1 Module Configuration.....	10
2.1.1 Basic Configuration	10
2.1.2 Channel Input/output specific parameters	11
2.1.3 Watchdog.....	12
2.2 Module IO Setting.....	12
2.2.1 Analog Input channel setting and test	14
2.2.2 Analog Output Channel.....	15
2.2.3 Digital Input Channel Test	17
2.2.4 Digital Output Channel Configuration	19
2.3 Safe/Load Module Configuration File.....	20
Chapter 3. FAQ	24
3.1 Communication.....	25
3.2 Read data.....	26

Chapter 4 Technical Support.....27

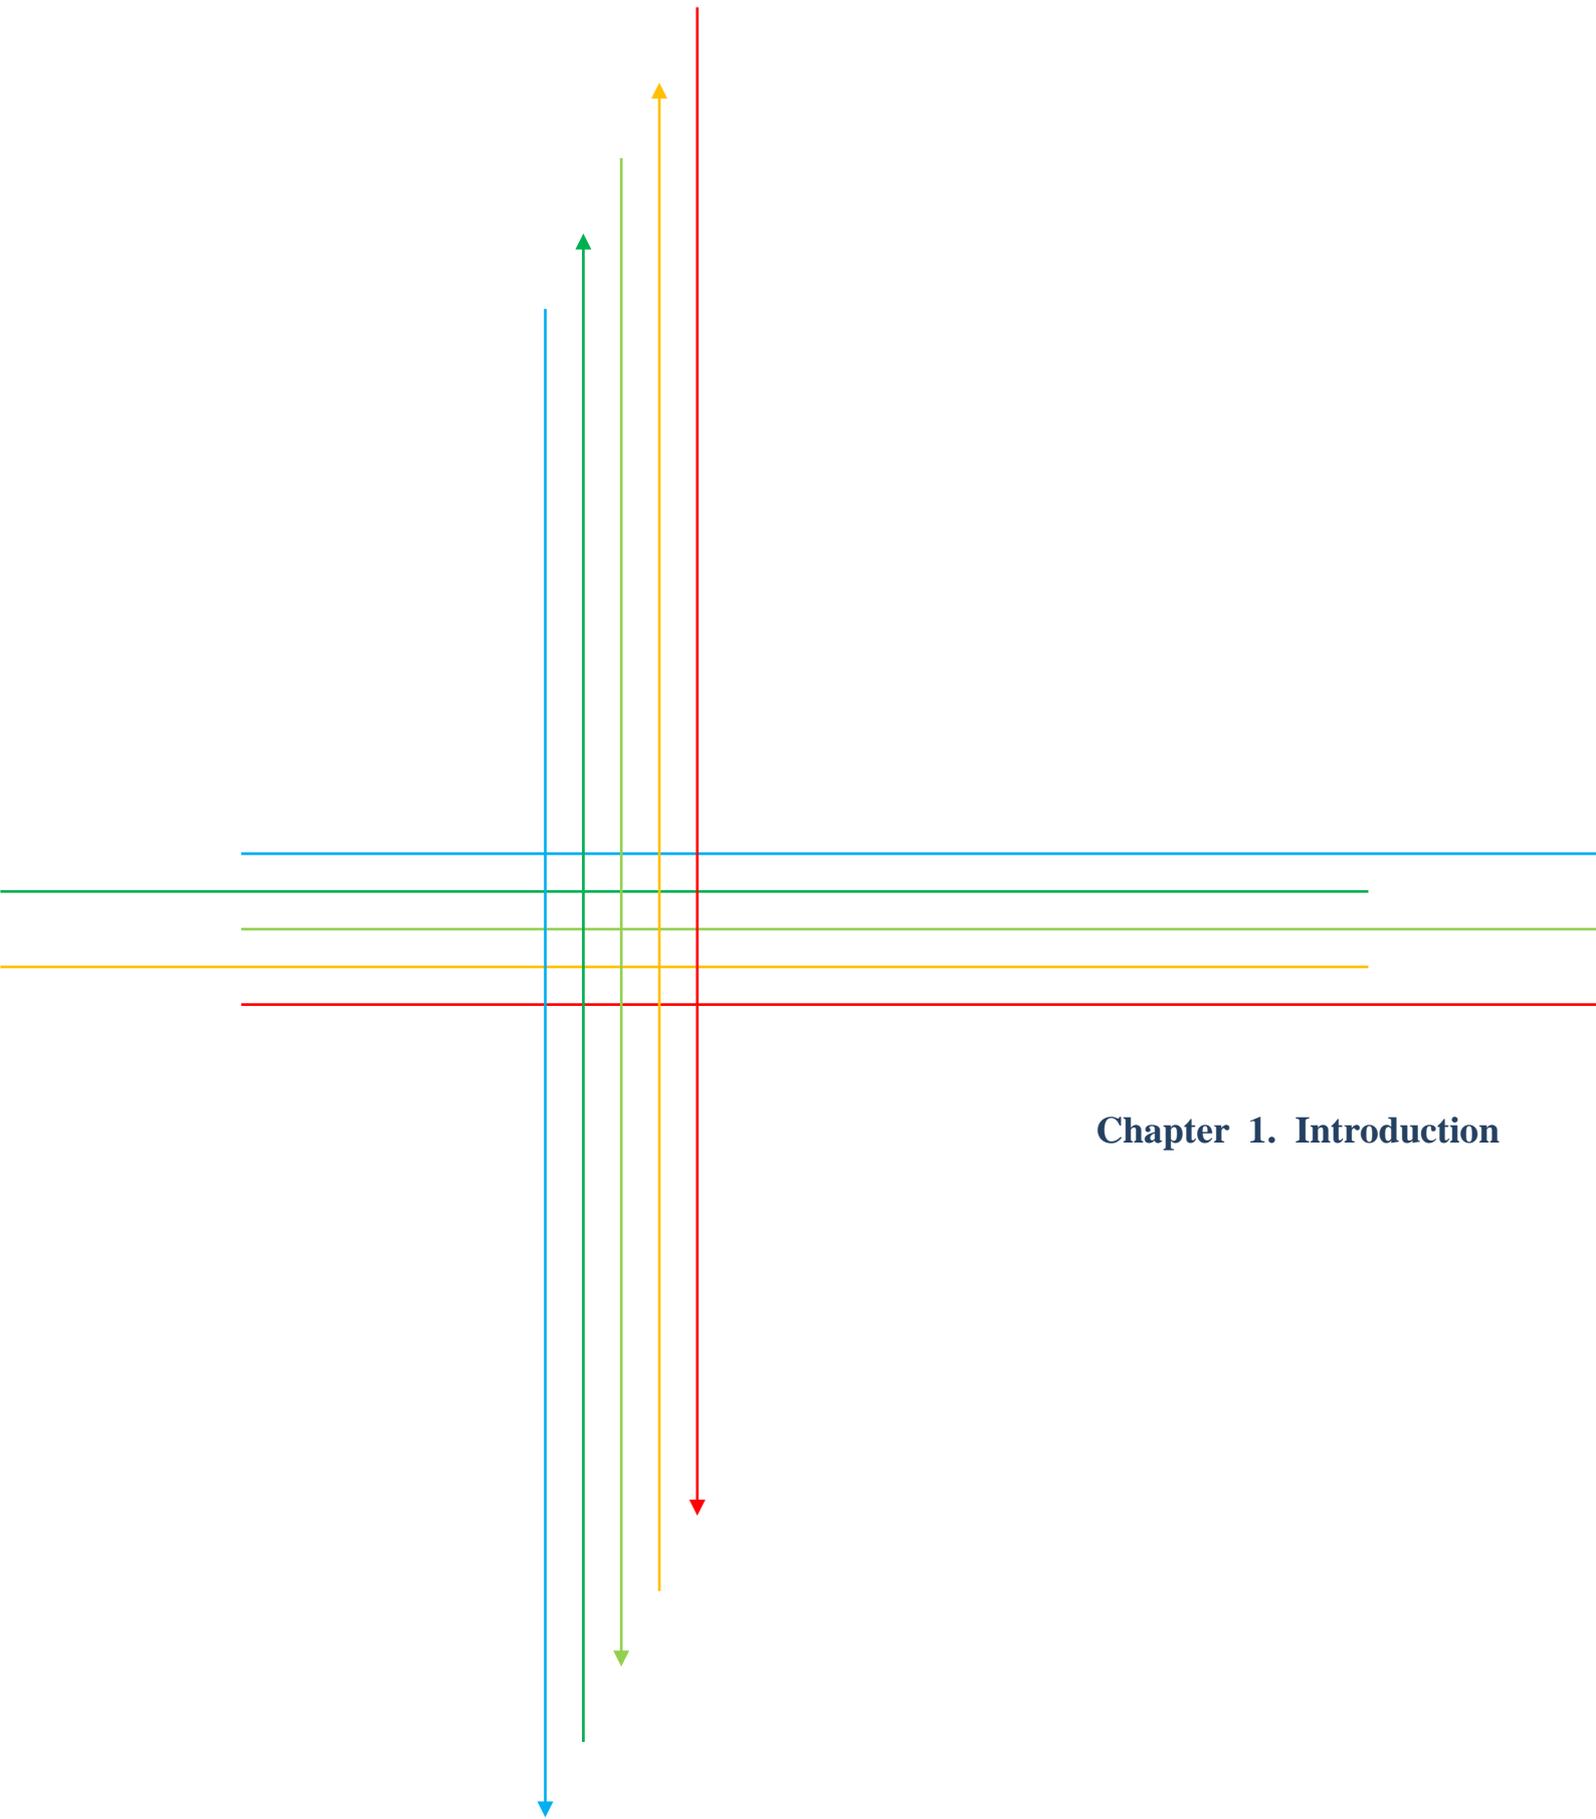


Chapter 1. Introduction

1.1 Utility Overview

Welcome to use Wolf series module configuration utility. This utility is provided for Wolf series remote I/O module using RS-485 to configure the I/O configuration.

Wolf series remote I/O module provides 7 kinds of control mode: analog input, output, analog input/output, digital input, output, digital input/output and relay etc. The protocol used in-between host and modules is Modbus/RTU. A great variety of baud rates (1200, 2400, 4800, 9600, 19.2k, 38.4k, 57.6k and 115.2k) are also available for user to select appropriate transmission rate.

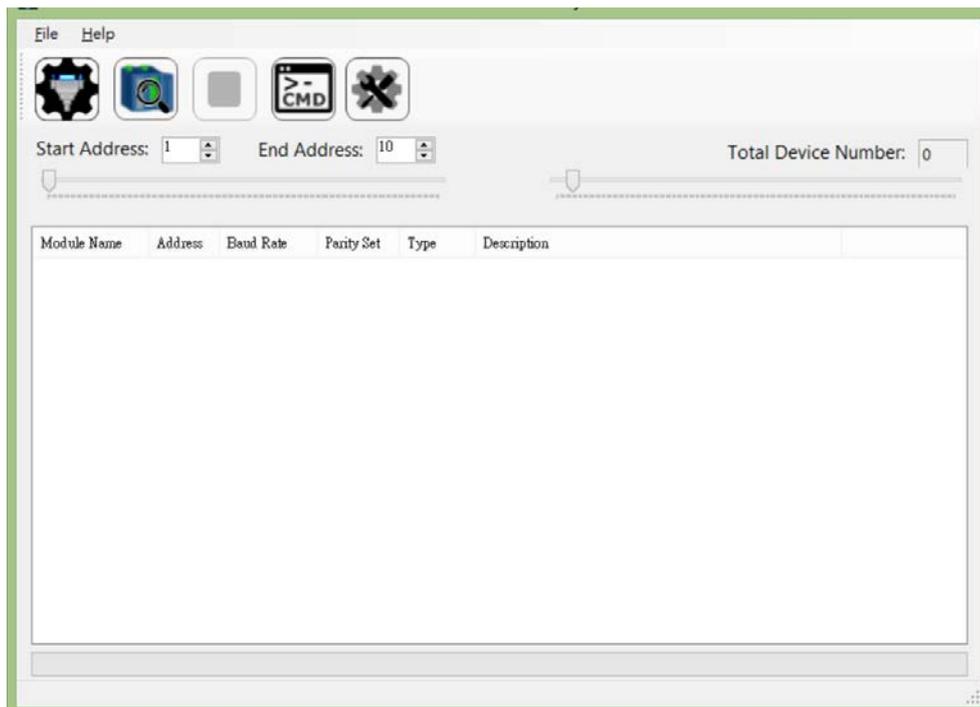

1.2 Power Requirement

In addition to prepare Wolf series module, you need to prepare a DC power supply range from +10 to +60V for module before using this utility.

1.3 RS-485 Network Connections

This utility uses RS-485 as network connection. If your PC is not equipped the RS-485 communication port, you need a USB to RS-485 converter or RS-232 to RS-485 converter. Please refer to module user manual for more details about building the system architecture.

1.4 Setup and Use

1.4.1 Power Supply and RS-485 Network Connections

When you have the Wolf series module, power supply, and RS-485 communication port ready. Please following the instruction of module user's manual to connect power supply and network. After that, you can start to use this utility to configure and test the functionality of module.


1.4.2 Module Address Setup and Default Communication Configuration

After connecting the power supply and network, the first step is to setup module address for each module. Please note that the address of connected module on the same RS-485 port is not replicable. Please refer to chapter 2.1.10 of module manual for setup procedures. The factory default baud rate setting of module is 9600bps, and the default parity, data bits, and stop bit format is N, 8, 1. The baud rate range is from 1200bps to 115.2Kbps. The parity, data bits, and stop bit format is N, 8, 1, N, 8, 2, E, 8, 1, or O, 8, 1. If you forgot the configuration


that you have configured, you can revert to factor default setting by following the instruction of module manual. Please refer to chapter 2.1.11 of module manual for operating procedures.


1.4.3 Setup Host PC Communication Port

Then run this utility on PC workstation, the following main screen will appear:

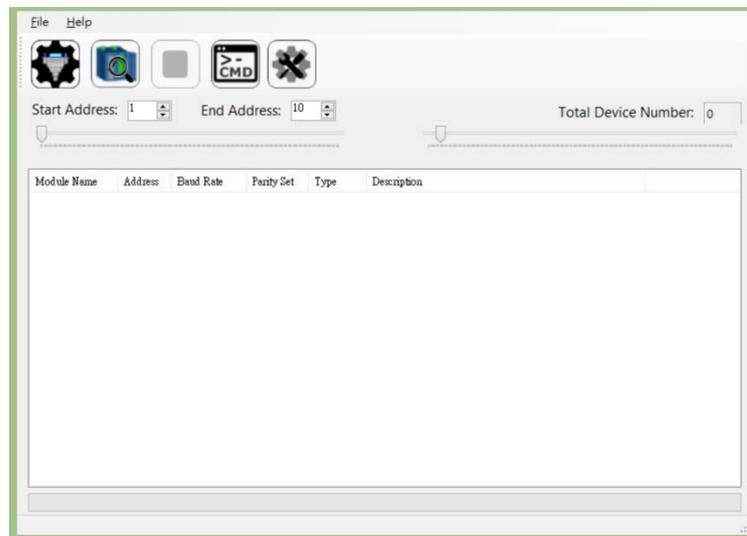

This utility will get all usable COM port · please click com port setting to select a correct COM port:

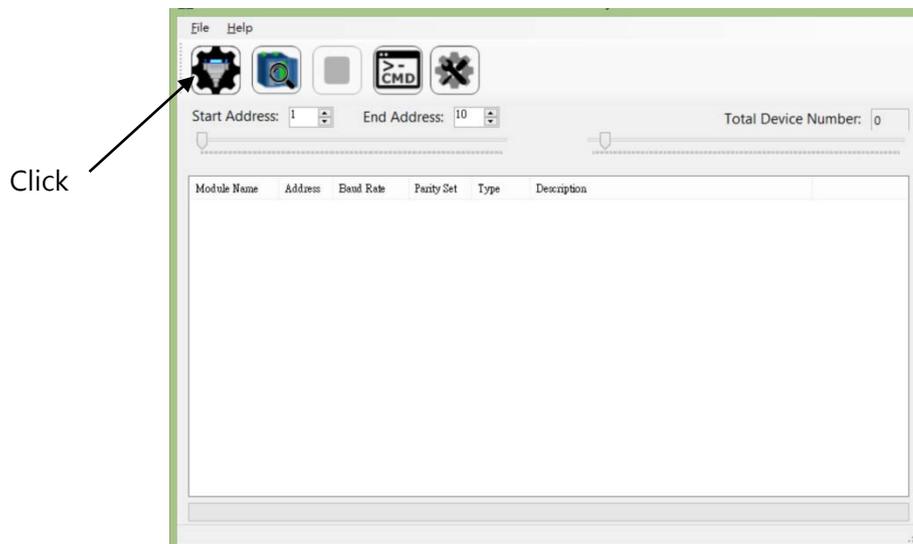


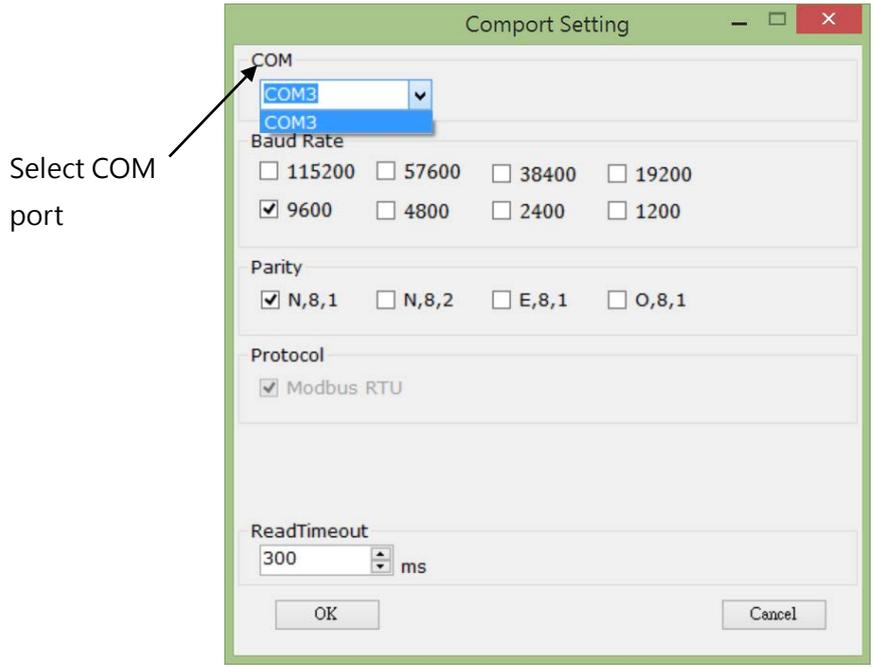

1.4.4 Search Module


After the module has been connected and the COM Port has been configured, you might use following default search condition to search module (If you forgot the module setting, you can select all condition, but it will extend the search time) :

1. Communication parameter

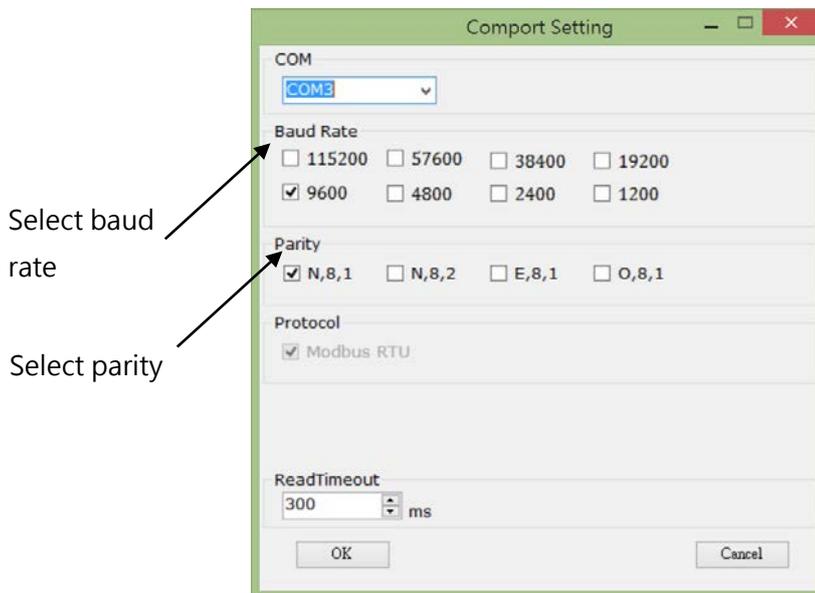

2. Address Range

Select address range (If you forgot module setting, you can choose 1 to 247, but it will extend the search time).

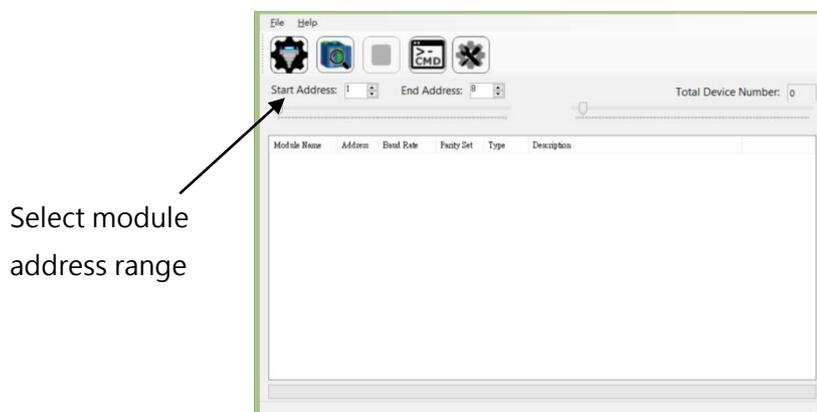

The result of search module is as below:

Stop search

Module list


Module Name	Address	Band Rate	Parity Set	Type	Description
W-M1B301	1[01h]	9600	N,8,1	Remote ...	[Modbus RTU]16-channel DC Digital Input Module
W-M1B302	2[02h]	9600	N,8,1	Remote ...	[Modbus RTU]32-channel DC Digital Input Module
W-M1B401	3[03h]	9600	N,8,1	Remote ...	[Modbus RTU]16-channel DC Digital Sink Output Module
W-M1B402	4[04h]	9600	N,8,1	Remote ...	[Modbus RTU]32-channel DC Digital Sink Output Module
W-M1B403	5[05h]	9600	N,8,1	Remote ...	[Modbus RTU]8-channel Relay Output Module
W-M1B404	6[06h]	9600	N,8,1	Remote ...	[Modbus RTU]16-channel Relay Output Module
W-M1B103	7[07h]	9600	N,8,1	Remote ...	[Modbus RTU]8-channel Universal Analog Input Module with Hi...
W-M1B107	8[08h]	9600	N,8,1	Remote ...	[Modbus RTU]8-channel Thermocouple Analog Input Module

Search Completed.

1.4.5 Guideline for Failure to Find Module

If there are any modules that are connected on the same RS-485 port and are unable to be found, please examine the following case:


1. Please check if module is connected on the same RS-485 port, please check the cable if it is not connected.
2. Whether the cable is connected correctly? Whether the wire is broken or not?
3. Whether the connection distance is too long (Which is also related to cable characteristics of RS-485) or excessive module number. Please try to decrease the baud rate or add a repeater. And you can only connect maximum of 32 modules in the same segment, you need to use repeater if module number exceeds.
4. Communication configuration might not include setting of partial modules. Please try to select all configuration and search module again, although utility might spend a lot of time to search, please be patient and wait for a while.
5. If none of above is the correct case, please initialize the module to factory default, and try to search it again.
6. If problem still cannot be resolved, it could be malfunction of module. Please follow the instruction of module user manual.

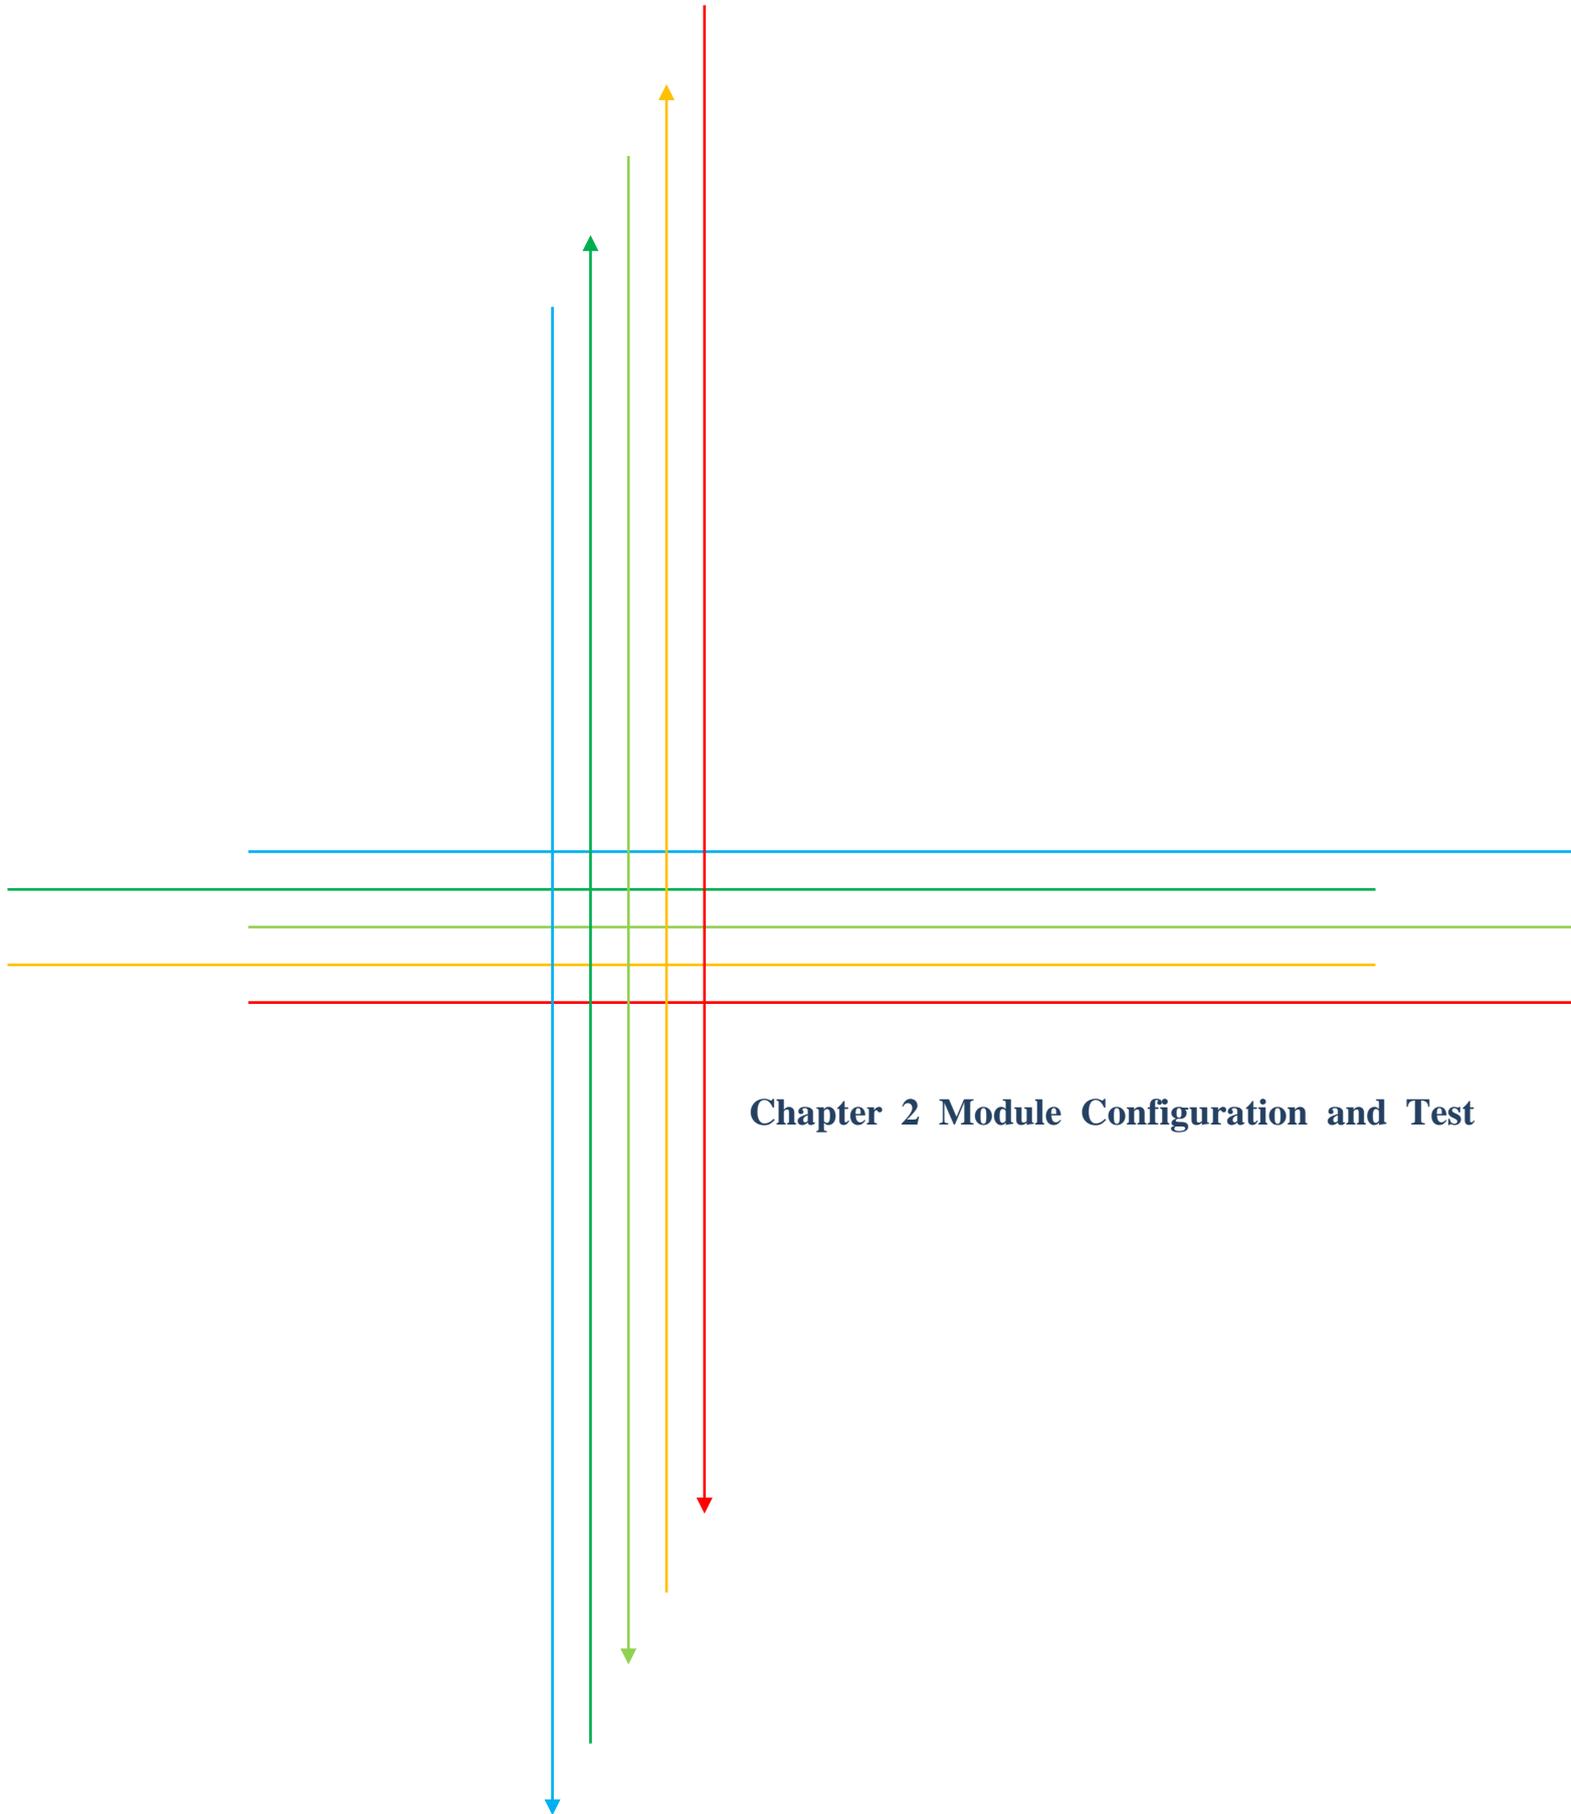

Chapter 2 Module Configuration and Test


2.1 Module Configuration

In the list of modules, click the module that you are going to configure, and then click the “Remote I/O Module Configuration” button to configure module.

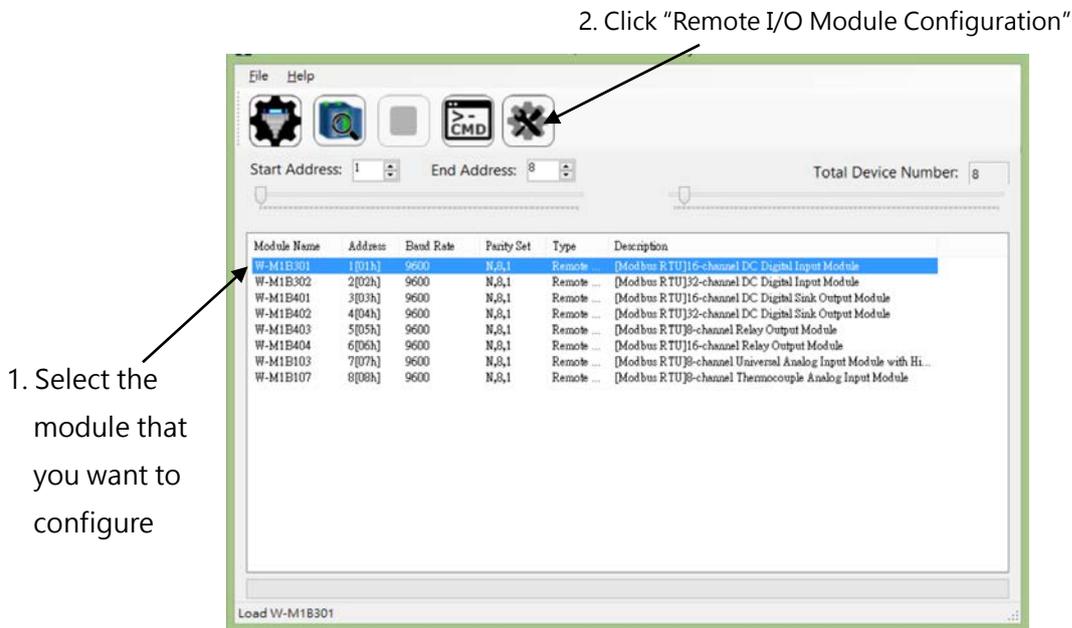

2.1.1 Basic Configuration

After entering the module configuration window, you can see there are 4 tab pages of configurable configuration. They will be further explained in the following section. First, let’s see the basic configuration:

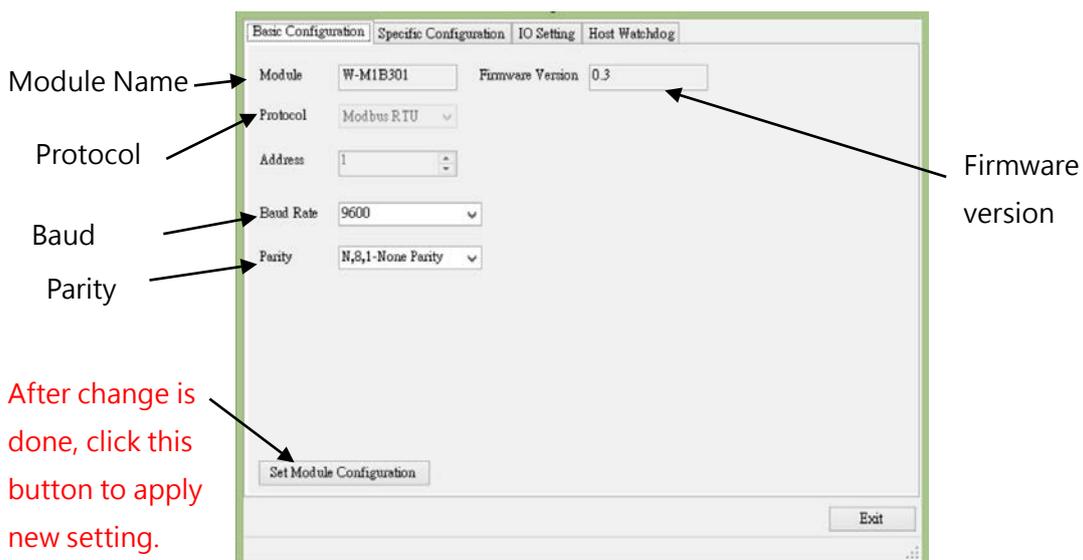

✘ After setting is done in this tab, user must power off and then power on


module for taking effect of new configuration.

2.1.2 Channel Input/output specific parameters

Each module has some specific parameter setting, please refer to module manual for more details.


Digital Input Module: Invert DI State

After change is done, click this button to apply new

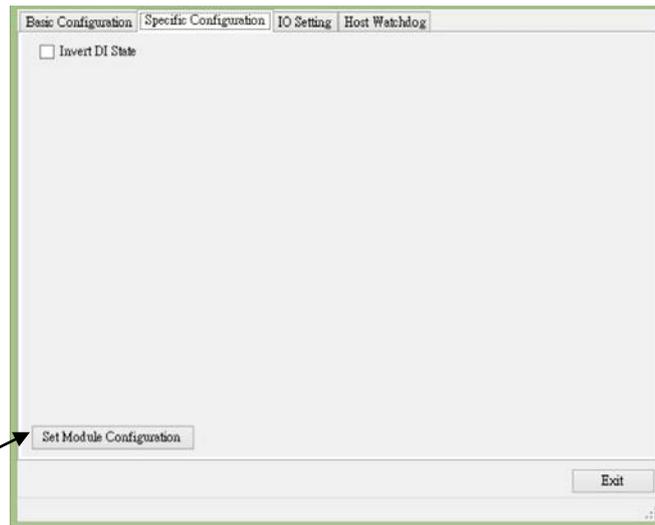


Digital Output Module: Invert DO State

After change is done, click this button to apply new setting.

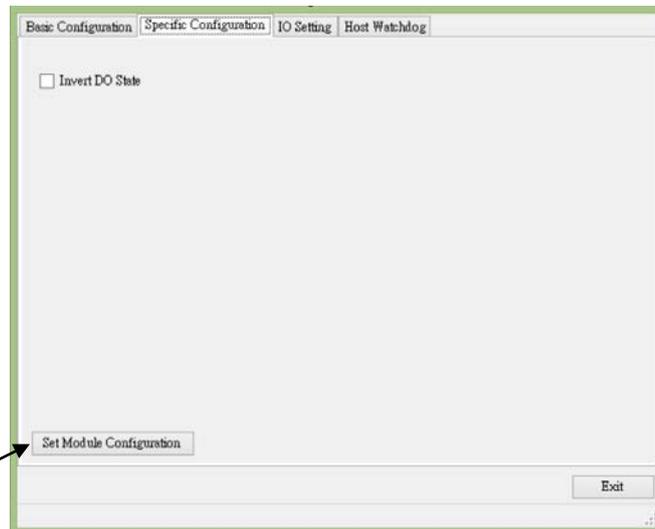

Analog Input Module: Set the data format of module to be 2's complement hexadecimal or engineering format.

After change is done, click this button to apply new ...

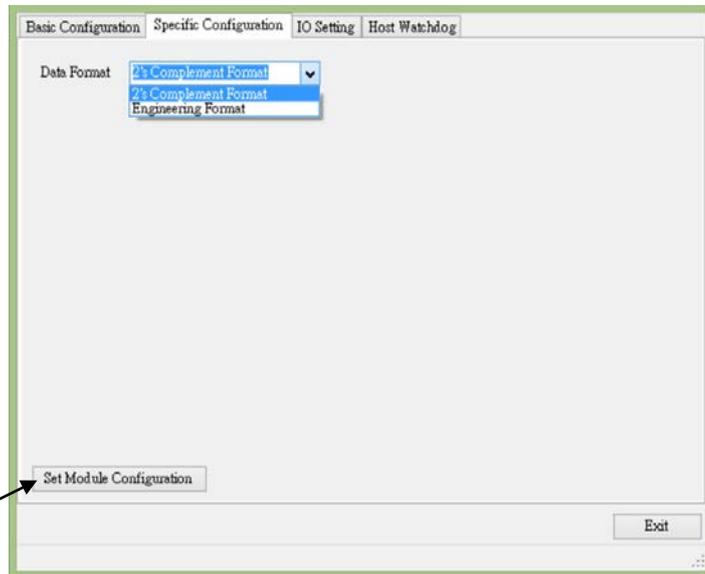


2.1.3 Watchdog

Host watchdog is software monitoring the operation status of system, its purpose is to provide immediate counter-measure when erroneous network, communication or breakdown occur. Once time-out occurs, the module will reset all outputs to configured SAFE mode.

Enable or disable WDT function
WDT Timeout


After change is done, click this button to apply new setting.

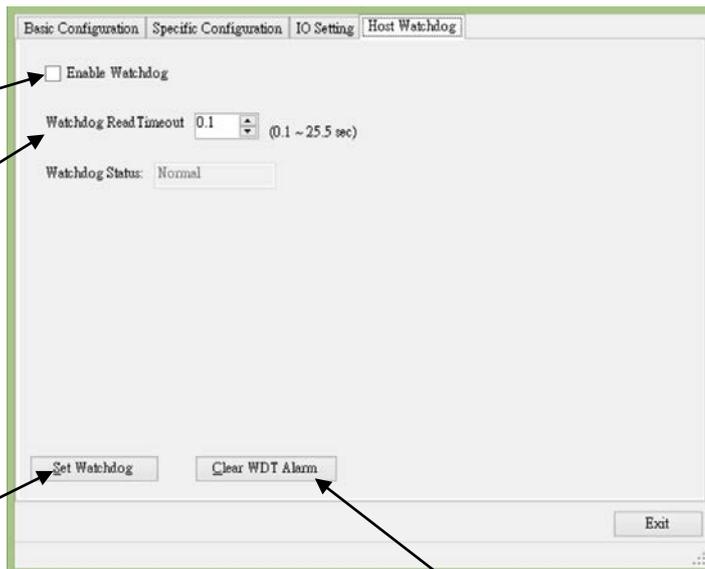


If there is a WDT alarm, click this button to clear ...

2.2 Module IO Setting


When module has Digital Input channels, DI will show numbers, and it can be clicked.

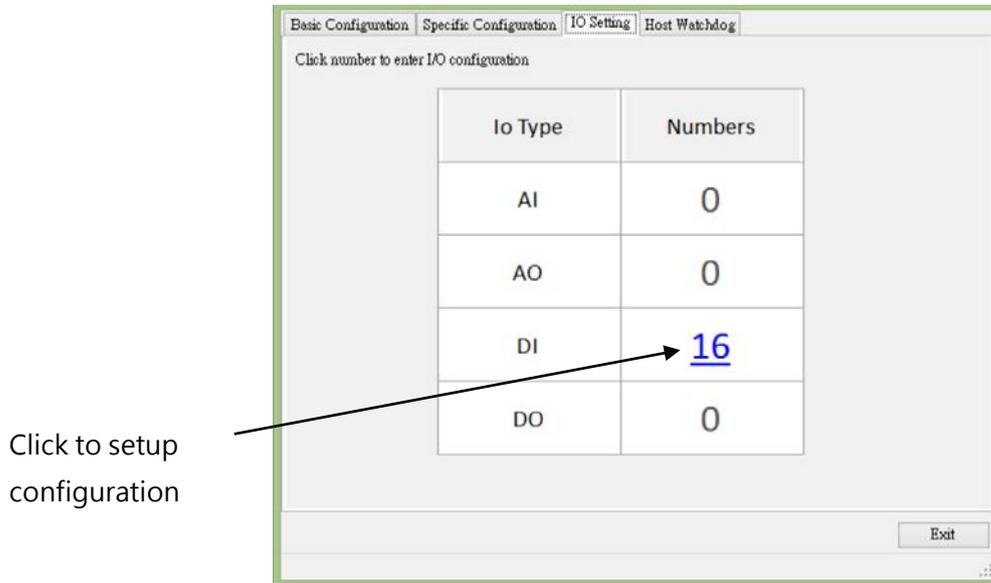

When module has Digital Output channels, DO will show numbers, and it can be clicked.

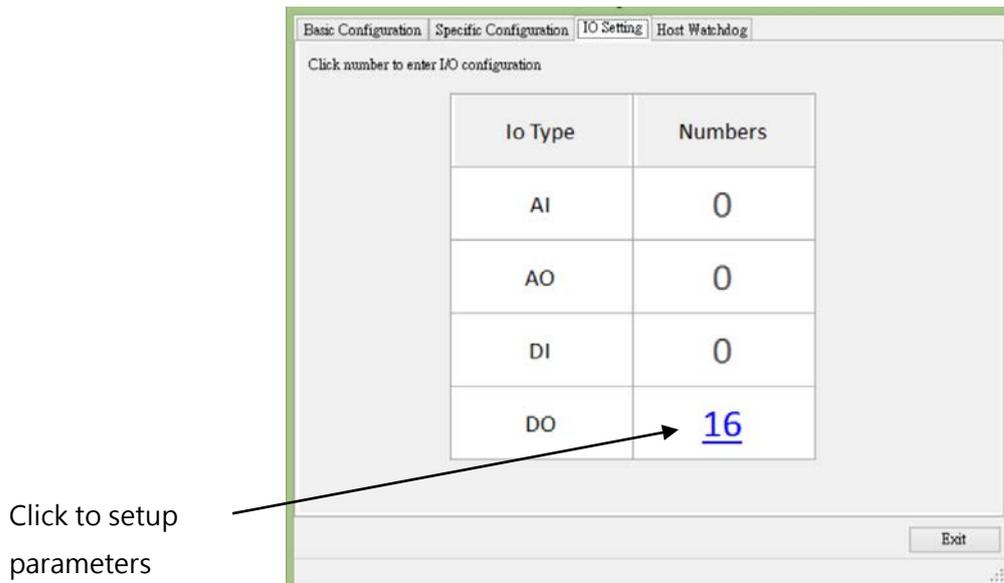



When module has Analog Input channels, AI will show numbers, and it can be clicked.

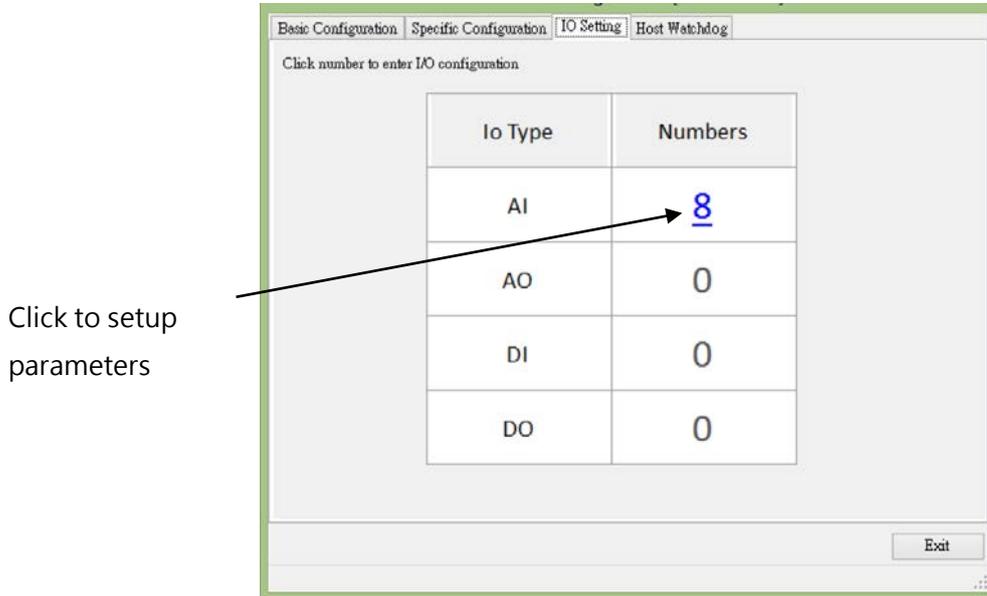

2.2.1 Analog Input channel setting and test


After entering the AI configuration window, you can setup AI channel configuration and CJC (Cold Junction Compensation) configuration:

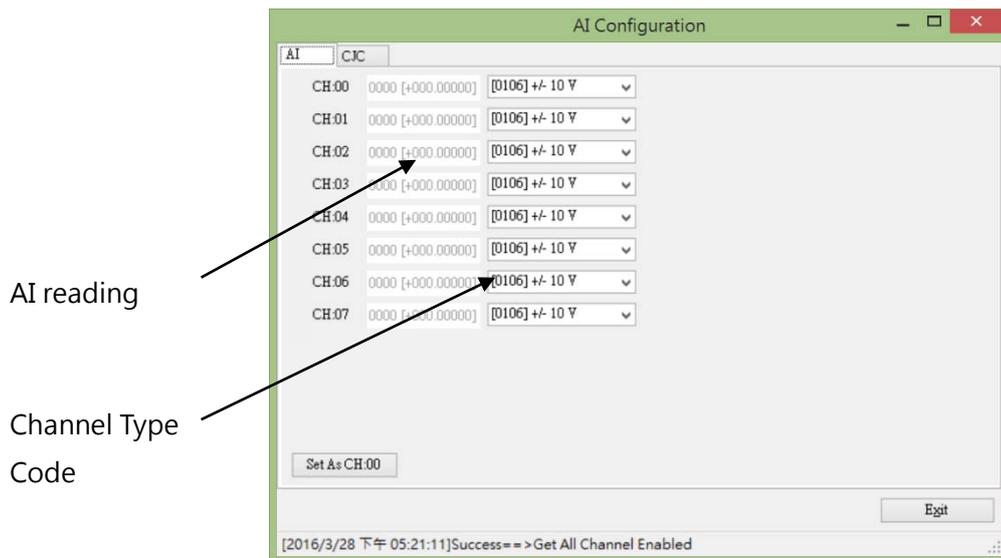

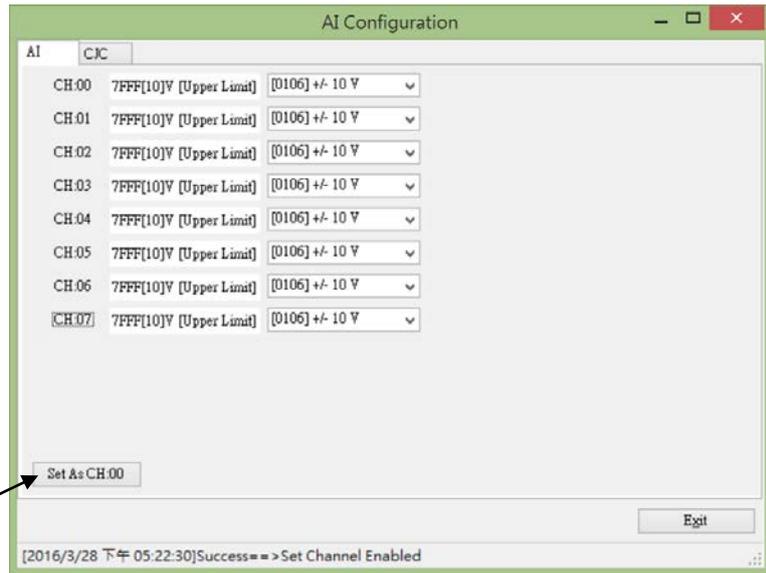

Set channel type code of all channel as channel 0

CJC Configuration:

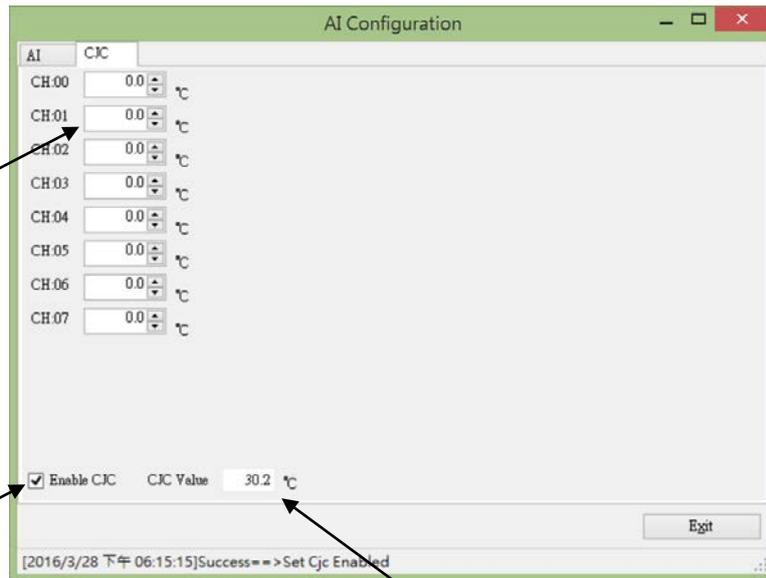

CJC Offset of all channel

Enable CJC offset function. TC temperature reading will be adjusted by CJC

Current CJC temperature

2.2.2 Analog Output Channel

The current version does not support AO modules.

2.2.3 Digital Input Channel Test

After entering digital input configuration, you can test DI on/off status, latch status, and counter function.

The image displays three sequential screenshots of the 'DI Configuration' software window, illustrating different testing functions. Each window has a title bar with standard OS controls and a tabbed interface with 'DI Value', 'DI Latch', and 'DI Counter' tabs.



First Screenshot (DI Value tab): Shows the 'Current DI Value' section with a 2x8 grid of buttons labeled CH0 through CH15. All buttons are black with the text 'OFF'. An arrow points to the top-left corner of the grid.

Second Screenshot (DI Value tab): Shows the same grid, but the 'CH2 OFF' button is highlighted in green. An arrow points to this button.

Third Screenshot (DI Latch tab): Shows the 'Current DI Latch Value' section with two columns of buttons. The left column, labeled 'High', has buttons CH0-CH15, with 'CH2' highlighted in green. The right column, labeled 'Low', has buttons CH0-CH15, all highlighted in green. An arrow points to the 'DI Latch' tab.

Labels and arrows on the left side of the images provide context for each screenshot:


- Display DI status of all channel (points to the first screenshot)
- Display DI On/Off status of all channel (points to the second screenshot)
- Display DI On/Off status of all channel (points to the second screenshot)
- LATCH status (points to the third screenshot)
- Display LATCH status of all channel (including LATCH HIGH and LATCH LOW) (points to the third screenshot)

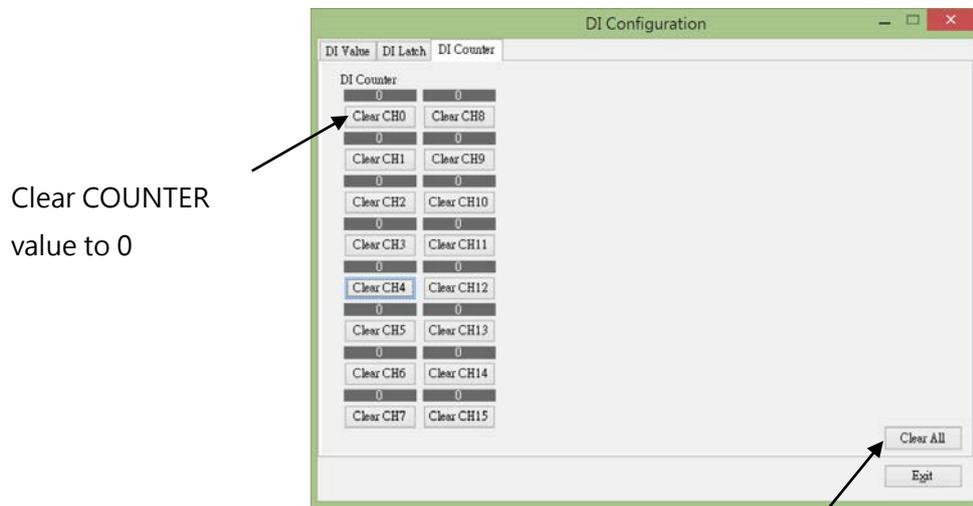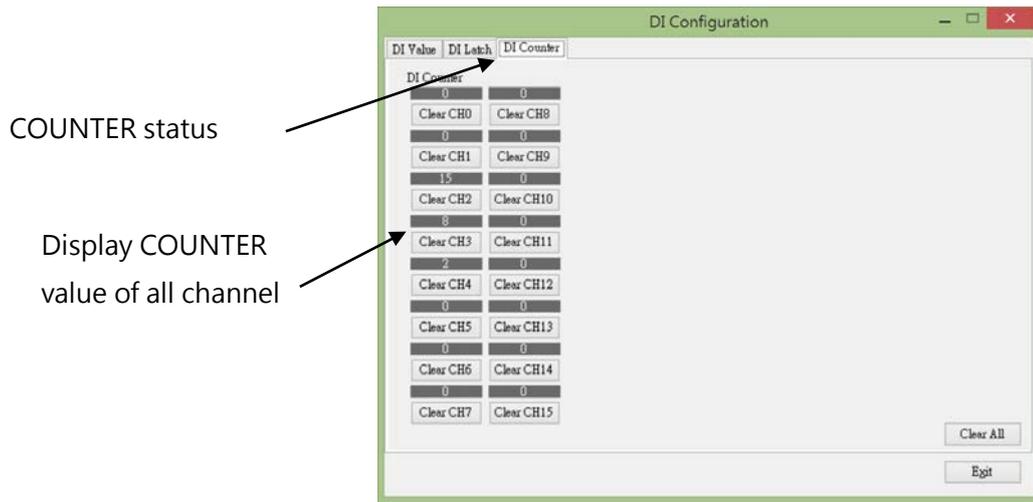

Clear all COUNTER value to 0

2.2.4 Digital Output Channel Configuration

After entering DO (digital output) configuration, you can test DO on/off, and configure power on value and safe value (which takes effect when host watchdog timeout has occurred).

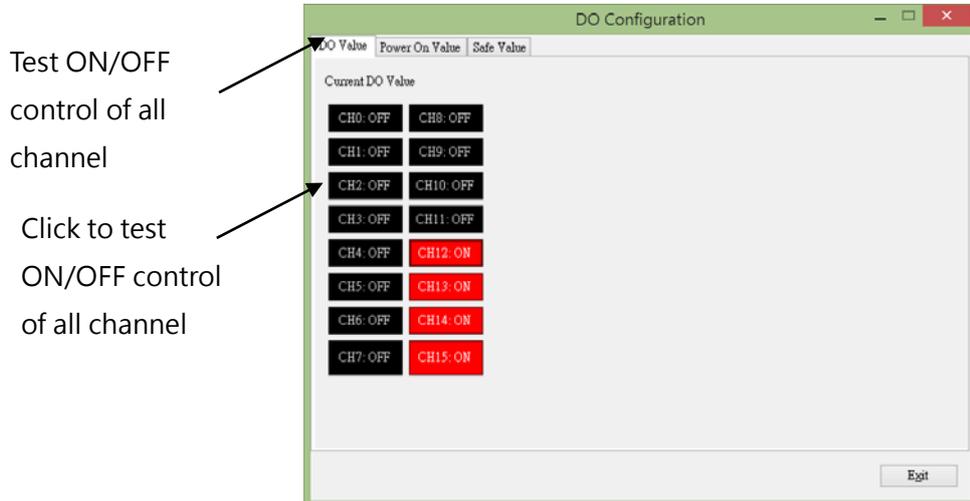


2.3 Save/Load Module Configuration File

Module configuration can be save to file for backup or template file. The template file also can be loaded into module for quick setup module configuration. The operating steps are as follows:


In IO Setting tab page, you can see [Save Configuration File] and [Load Configuration File] button:

Safe to file for backup or template file:


Click the [Save Configuration File] button.

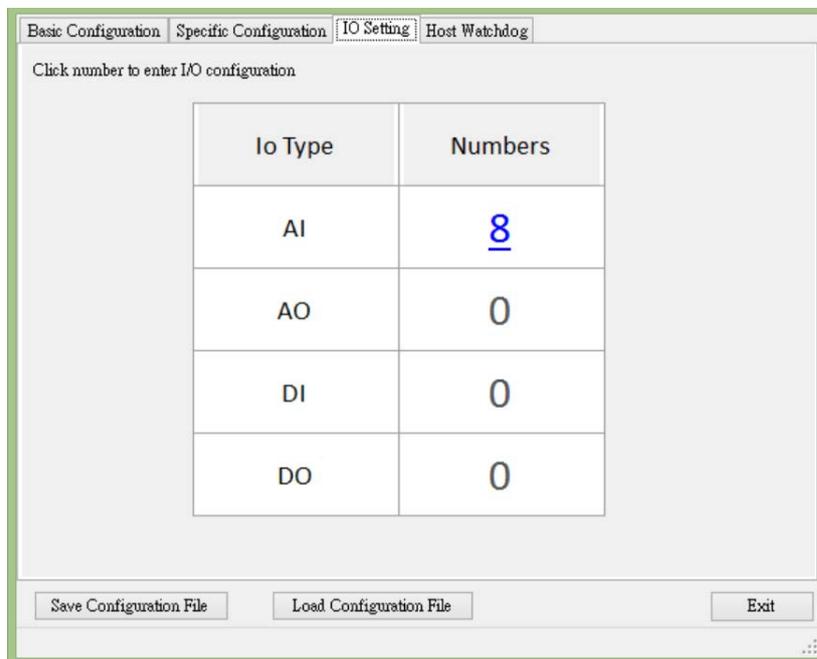

It will pop up a window for type in file description to describe data for management. Please click [Ok] to continue or [Cancel] to cancel this operation.

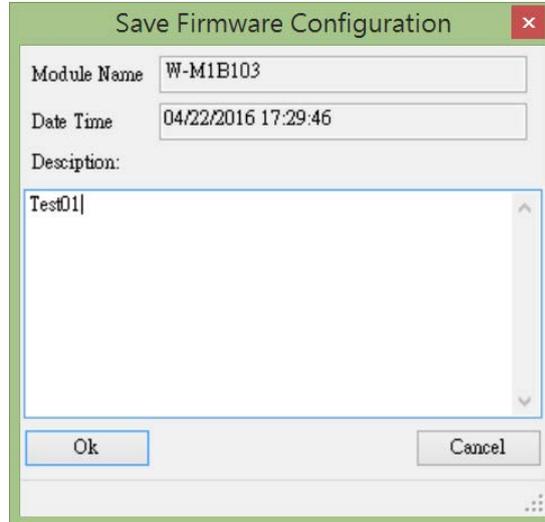


After clicking the [Ok] button, it will pop up a safe file dialog to prompt the user to select a location for saving a file, please specifies a file name and select a location to save file.

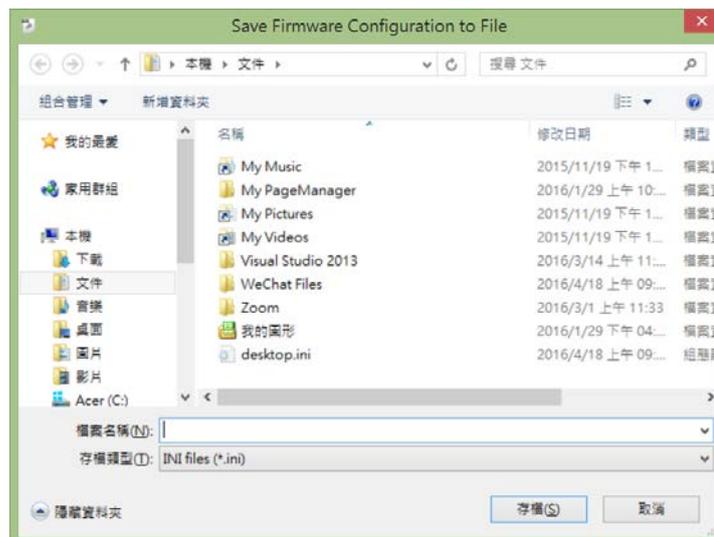


Load a template file into module:


In IO Setting tab page, click the [Load Configuration File] button.

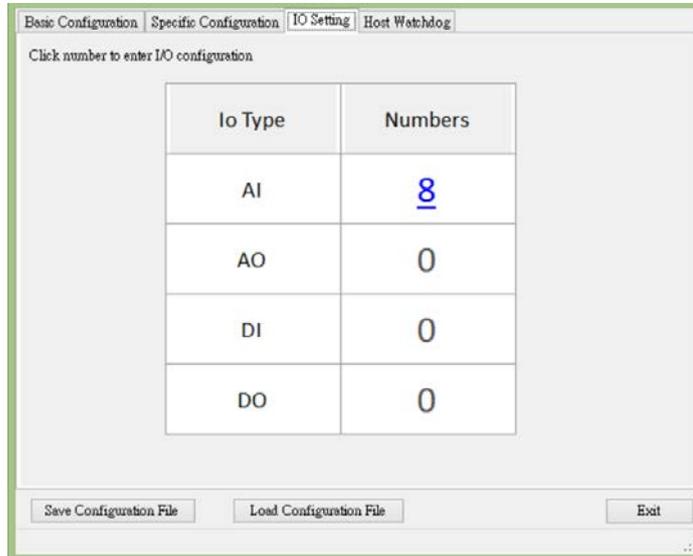


It will pop up an open file dialog to prompt the user to open a file, please select file and click open to load the file.

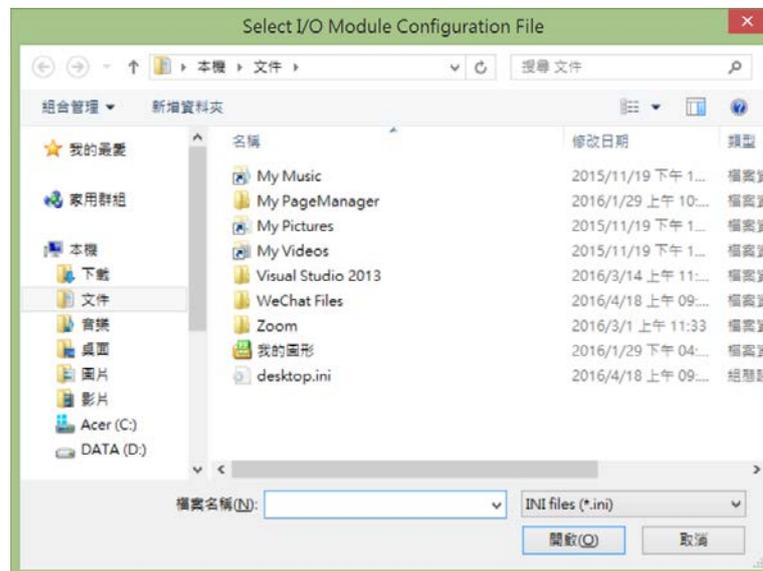


After loading file and before loading configuration to module , it will pop up a warning window, indicating notes for attention and the contents of configuration file , Click [ok] button to continue or [Cancel] to cancel this operation.

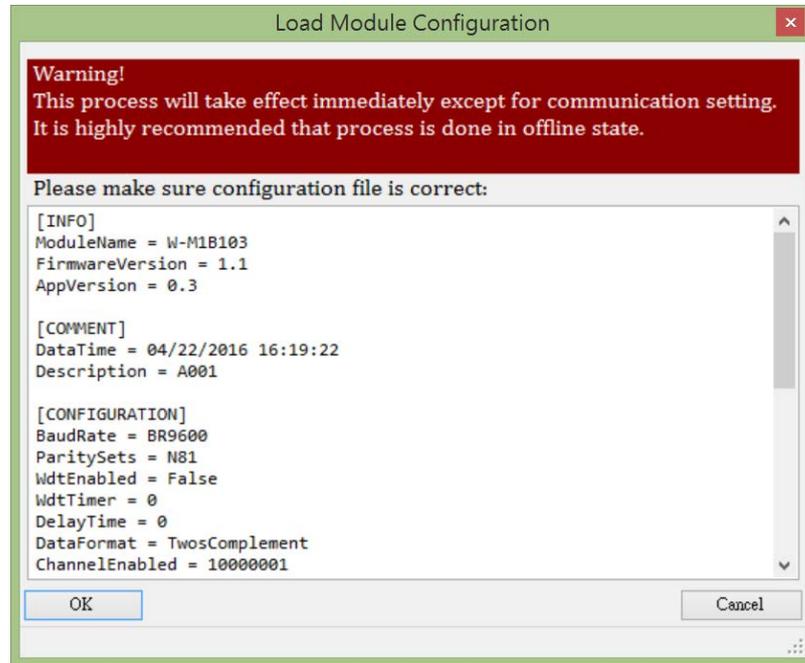

If the communication configuration has been changed, you must restart the I/O module for loading new configuration correctly.

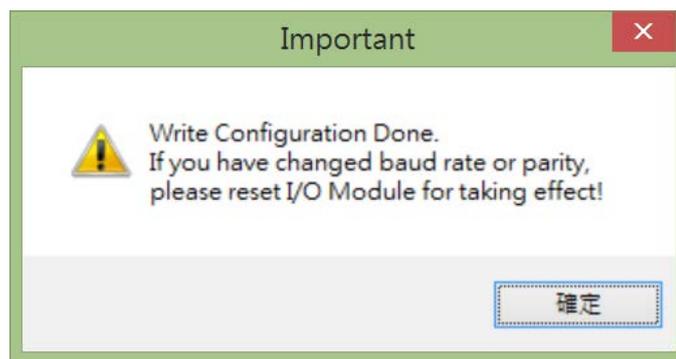

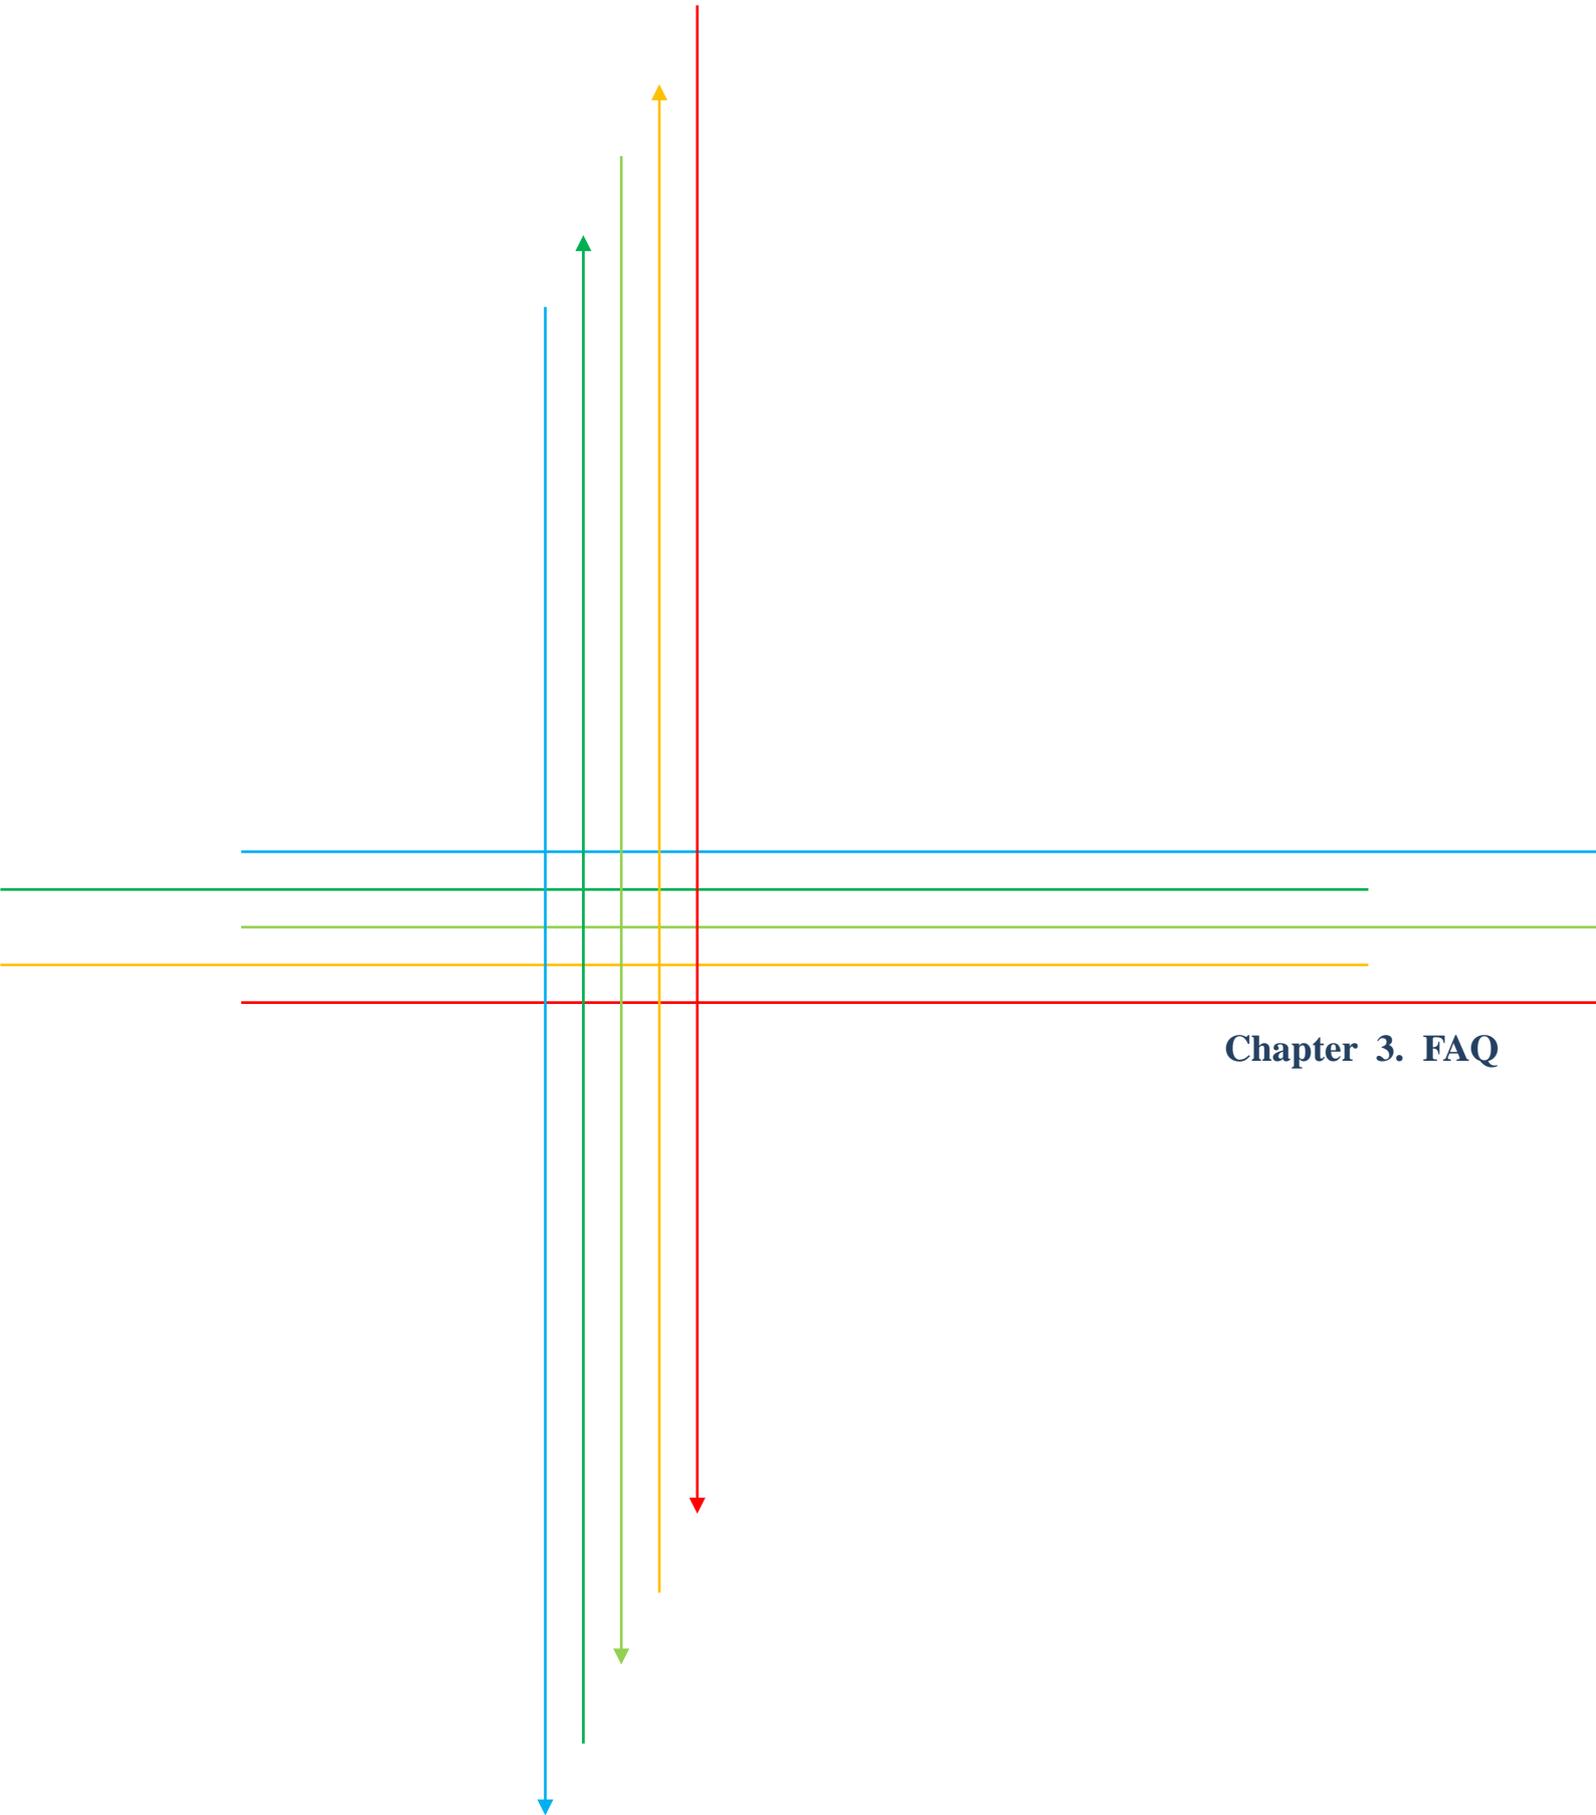

Chapter 3. FAQ

If you have difficulty in using Wolf Series module, please look up the related information in this manual. Shall you have any unsolved issues, comment or suggestion, please visit our website and contact us. With the greatest enthusiasm and endeavor, we will be always ready to serve you.

Email: service@advanio.com.tw

Website: <http://www.advanio.com.tw>

3.1 Communication

If you failed in communicating with the module, please proceed with the following steps:

Step 1:

- Confirm the power supply voltage range is set at +10 to + 60V DC, otherwise, make sure the power LED indicators on the module is normal.

Step 2:

- Upon receiving the command, the Power LED will flash once. Follow this procedure to check if the module receives command from the host.

Step 3:

- Under permissive conditions, other equipment may also be used to detect whether the host PC can be communicate with a normal communication protocol which based on RS485 communication network equipment.

Step 4:

- If the host is a PC with Windows Operation System installed, user can execute Utility software to check the availability of I/O module. (Please

download the software via Advanio official site.

(<http://www.advanio.com.tw>).

Step 5:


Setup the module into INIT mode, and have it communicate with the following parameters: serial transmission rate is 9600bps, no parity bit and the communication protocol is Modbus. (Confirm your Address setting)

3.2 Read data

If data collected from I/O module are abnormal, perform the following steps to check it:

Abnormal data read may be resulted from the abnormal parameter storage in Memory, please use Utility software to check it or reset it to INIT mode.

Please refer to 2.1.11 (Factory Reset) to solve I/O module abnormality.

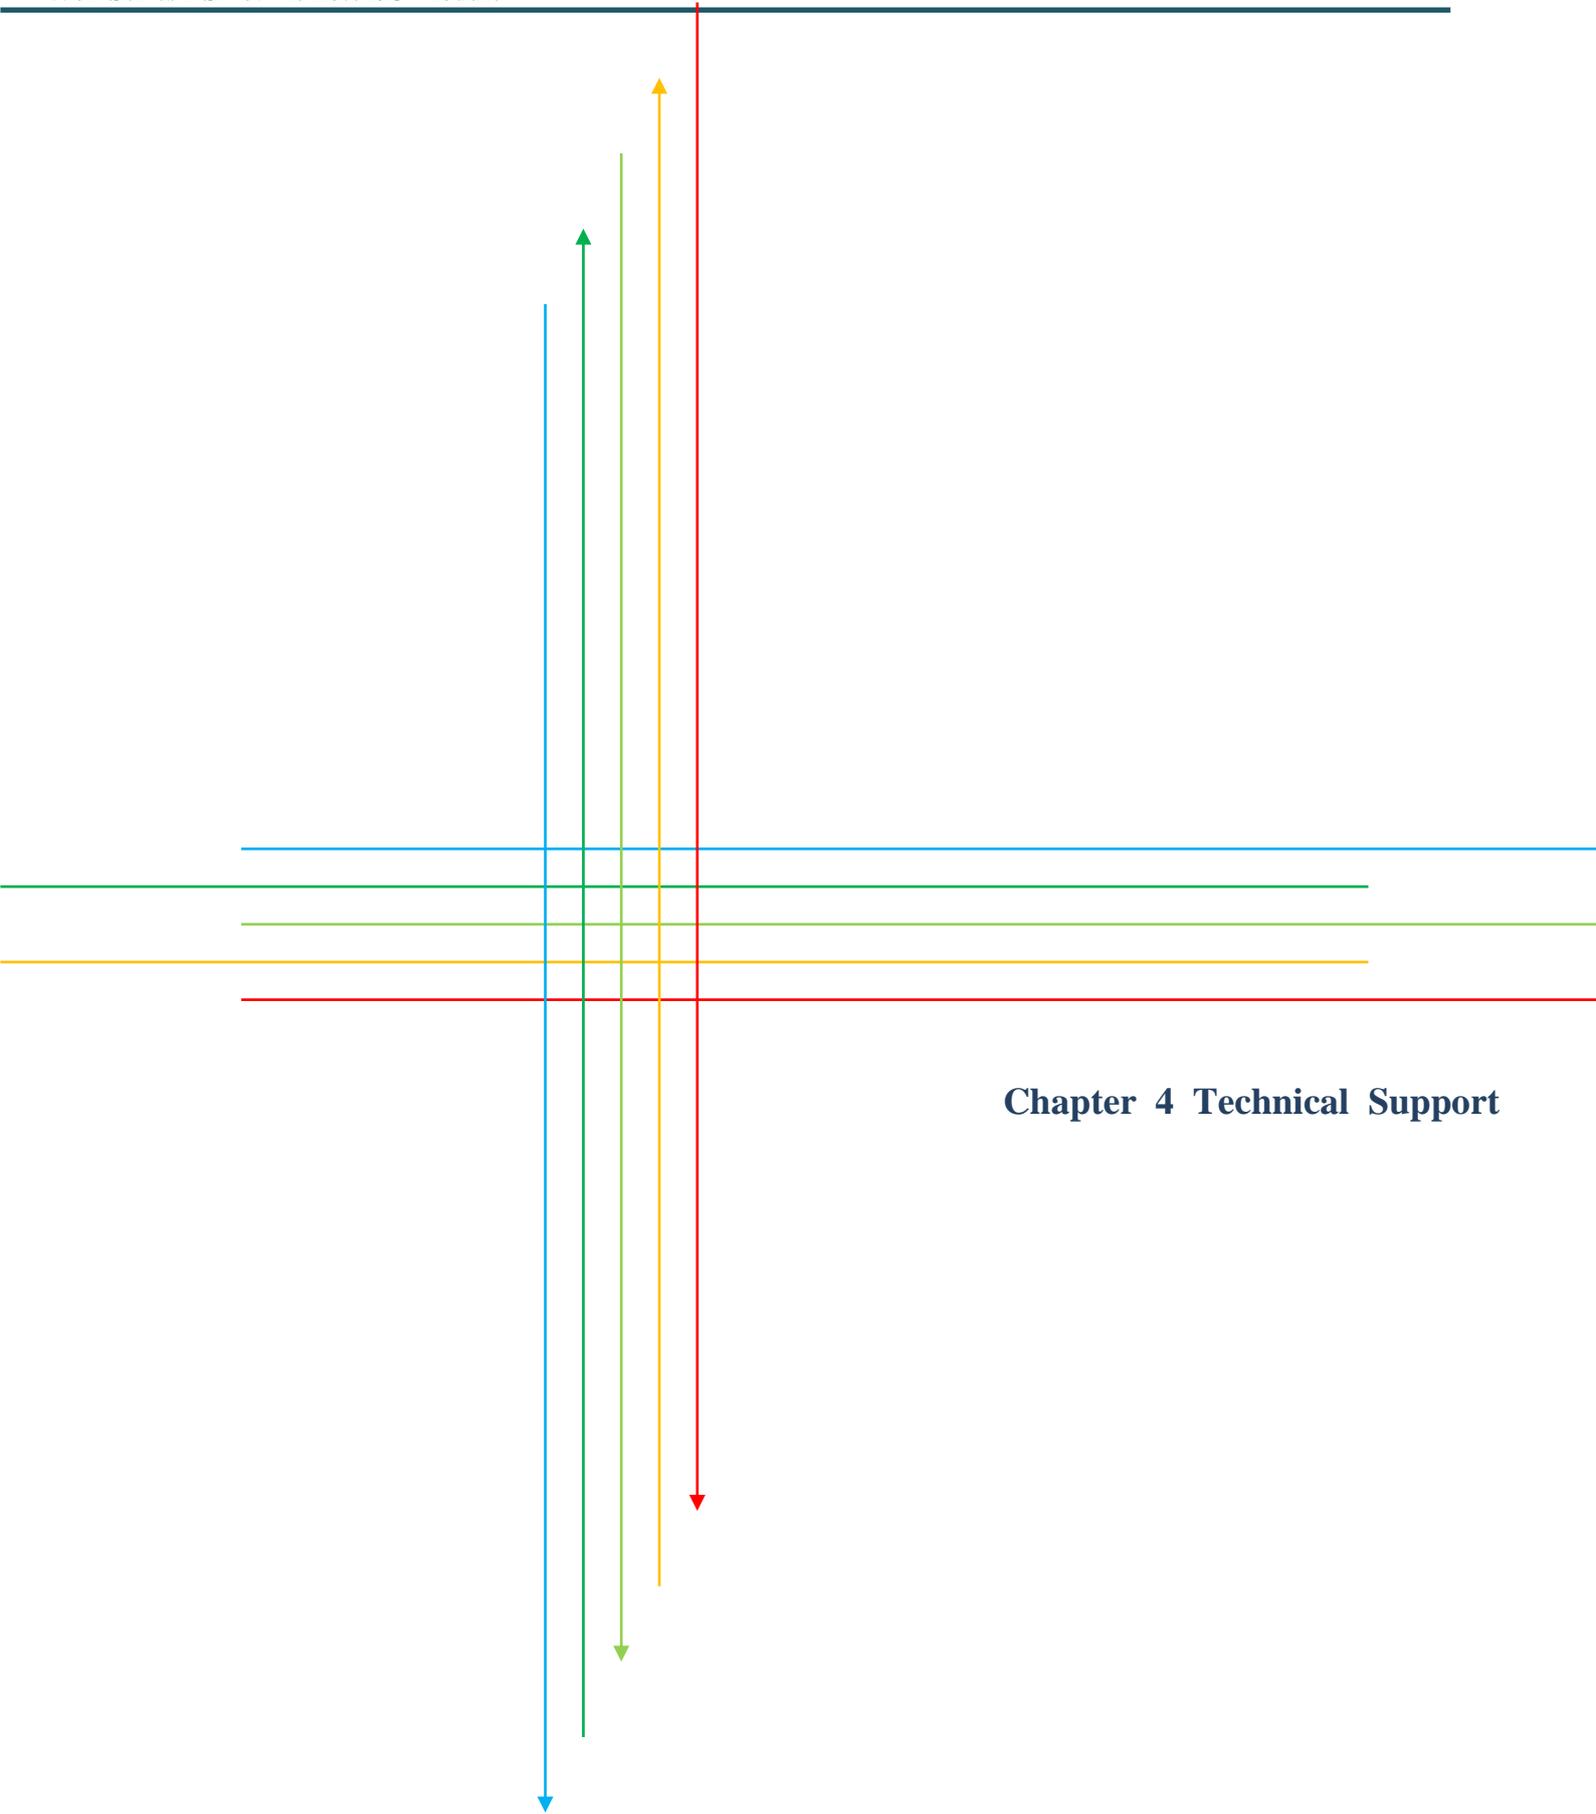

Chapter 4 Technical Support

If any problem encountered during the application, please look up the user manual or contact us via company official website. We will be at your service.

Email: service@advanio.com.tw

Website: <http://www.advanio.com.tw>

Before Contacting our Technical Support, please prepare information as follows:

1. Serial number can be found on the bar code labeled on the cover of module.
2. Firmware version: For more details, please refer to MODBUS command about read firmware version command.
3. Host configuration (type and operating system).
4. If the problem is repeated, please provide full problem description and related applications.
5. For particular error messages display, please provide full content in Dialog Box including title and original text.
6. Any problem with program and hardware device concerned, please fully describe the details.
7. Your comments and suggestions will be highly appreciated.

You will have your feedback via Email within 2 working days.